



Meaningful Innovation.

INSTRUCTION MANUAL

SOLAR LED WALL LIGHT WITH SENSOR

TECHNICAL DATA

MODEL	VT-409CCT
SKU	23770-1/23824-1/24063-1
LUMENS	800 Lm
BEAM ANGLE	0-90° (Adjustable)
SOLAR PANEL	DC: 5V, 3W Monocrystalline
BATTERY	2600mAh, Li-ion Battery, DC:3.7V
CHARGING TIME	8 Hours
WORKING TIME	Max 30 Hours
SENSOR DETECTION ANGLE	120°
SOLAR PANEL POWER	3 W
SENSOR RANGE	4-5 M
COLOR TEMPERATURE	3000K / 4000K / 5000K
DIMENSION	150x153x150mm
BODY TYPE	Aluminium+PC



IP65
RATING

02 YEAR
WARRANTY*

INTRODUCTION & WARRANTY

Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference. If you have any other query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty is valid for 2 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. The products are suitable for 10-12 Hours Daily operation. Usage of product for 24 Hours a day would void the warranty. This product is warranted for manufacturing defects only.



MULTI-LANGUAGE MANUAL QR CODE

Please scan the QR code to access the manual in multiple languages.

WARNING

1. Please make sure to turn off the power before starting the installation.
2. Installation should be done by certified electrician.



This marking indicates that this product should not be disposed of with other household wastes.

INSTALLATION DIAGRAM

1

2

Red light on
(charging in progress)

Not included

Solar charging

Red light on
(charging in progress)

3

30

40

6

4

Green light on
(fully charged)

Solar charging

Green light on
(fully charged)

5

Color temperature and luminous angle adjustment

<input type="checkbox"/> WW <input type="checkbox"/> NW <input type="checkbox"/> CW	3000K
<input type="checkbox"/> WW <input checked="" type="checkbox"/> NW <input type="checkbox"/> CW	4000K
<input type="checkbox"/> WW <input type="checkbox"/> NW <input checked="" type="checkbox"/> CW	5000K

+45°

-20°



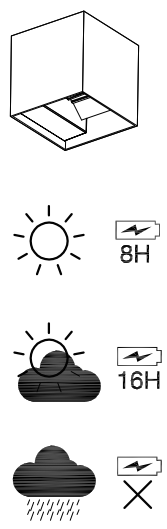
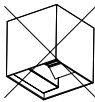
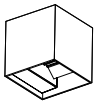

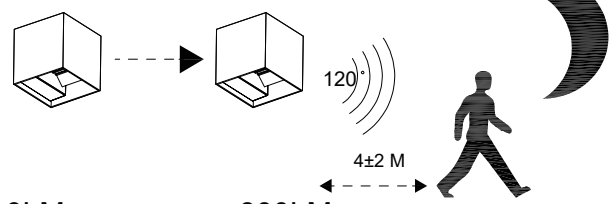
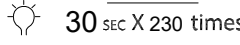
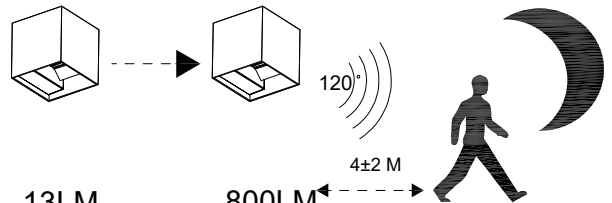
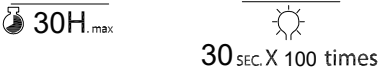
6

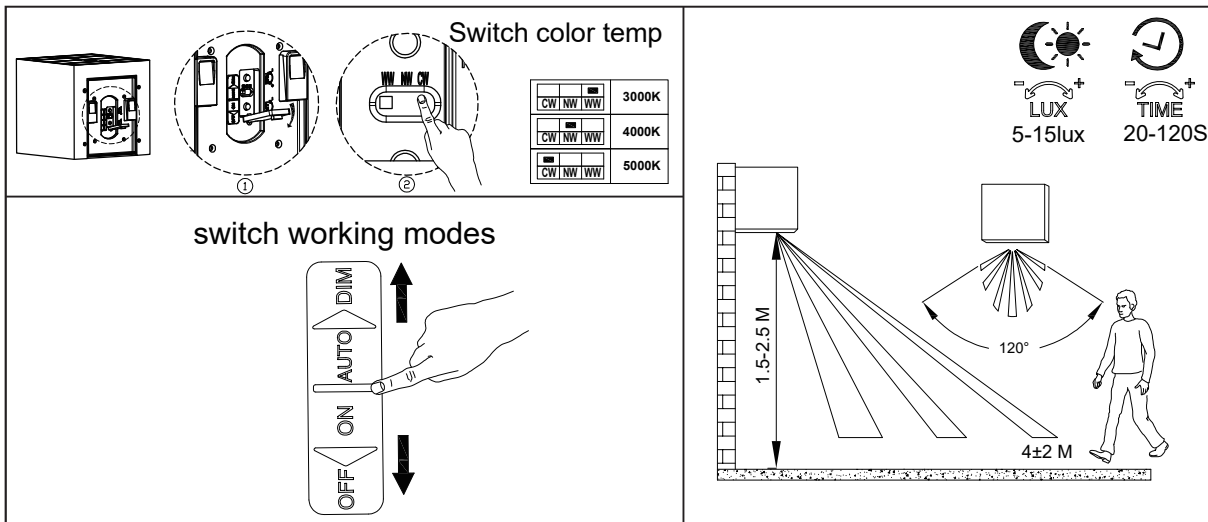
INSTALLATION INSTRUCTION

1. Power off the device.
2. Drill the hole to the required depth of 30mm.
3. Insert the plastic cap, Place the plastic cap into the hole.
4. Attach the base plate, Secure the base plate to the wall using the provided screw.
5. Slide the device up and down to fits securely onto the base plate.
6. Adjust the Sensor detection angle. Modify the angle according to your needs.
7. Power on and test the device.

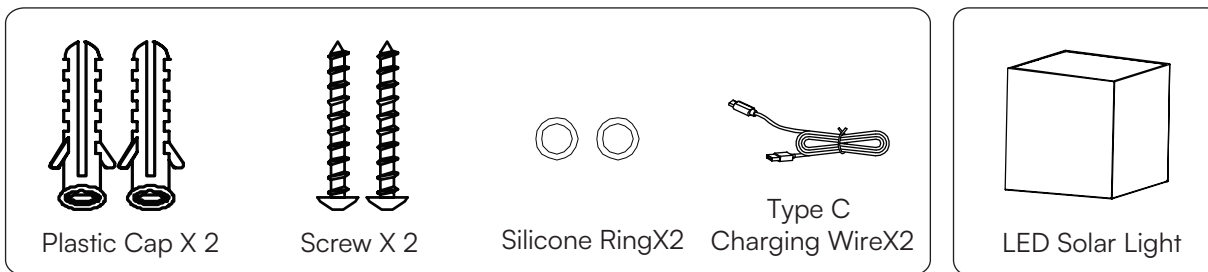


SENSOR MODES

  	<p>OFF</p>  <p>0LM</p>
	<p>ON</p>  <p>60LM</p>  <p>20H_{.max}</p> <p>8% output after sunset</p>
	<p>AUTO</p>  <p>0LM → 800LM</p>  <p>30_{SEC} X 230 times</p> <p>Motion detected 100% output for 30s, no motion off.</p>
	<p>DIM</p>  <p>13LM → 800LM</p>  <p>30_{SEC} X 100 times</p> <p>1.5% output after sunset, motion detected 100% output for 30s, no motion back to 1.5% output</p>



PACKAGE CONTENTS



IMPORTANT NOTES

- This product contains battery type "Secondary" (rechargeable).
- Electrical and electronic equipment that has become waste is known as old equipment/device. Old devices must not be disposed of with other household waste.
- Owners of old devices at the end of its service life must return the device by taking them to the collection points set up by public waste disposal authorities or distributors. This return does not entail any costs for you.
- Owners of old devices have an obligation to remove accessible batteries / rechargeable batteries as well as non-destructively removable lamps from the old device prior to return. This does not apply if old devices are being prepared for reuse with the participation of a public law firm.
- Battery removal warning: The battery contained in this product must be removed only by professional personnel only. The battery must never be removed by the end user, if not removed correctly it could damage the battery which could cause fire.
- Batteries removed from an old electronic device should be disposed of separately. This return of battery does not entail any costs for you and the user is obliged to return the battery.
- Please make sure that this product is not powered on when removing the battery. Fire hazard! Avoid short-circuiting the contacts of a detached battery. Do not incinerate the battery. Please handle the battery with Caution!
- If electrical appliances or batteries are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.



- The symbol of "Crossed rubbish bins" indicates that this product should not be disposed of with other household wastes and must be collected separately from unsorted municipal waste at the end of its service life.
- Please use the link below to view the online directory of the collection and return points: <https://www.ear-system.de/ear-verzeichnis/sammel-und-ruecknahmestellen>

RoHS



UK
CA

