
LED MAGIC COLOR DIY SPLICING LIGHT USER MANUAL

Installation Diagram:

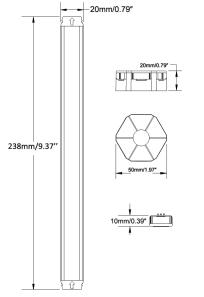

*Manual measurement error, take the actual object as the criterion.

REMODETE BY CHANGE CONTROL OF THE STATE OF T

Instructions for the receiving controller



You need to pay attention

Working temperature: -10~50 °C

Input Volt.: 5V / 2A

Remote control distance: >10 meters.

Remote control: Advanced 2.4G technology

Instructions for Remote Control:



1: Don't set it arbitrarily, otherwise the corresponding color will be changed,

such as red to blue.

2: If the remote control is out of control, please check if it is locked

Or check its battery.

3: Remove the plastic film before use.

Instructions for use of led controller:

los and android systems can download the APP by scanning the QR code. open the browser or other tools with "scan QR code" Function, scan the QR code as

Use your phone to scan the QR code



APP download

APP Installation steps

Click DuoCol StripX on the APP iconenter the app page.

After entering the App interface, if Bluetooth is not enabled, an application wants to enable the Bluetooth function of this device click allow



1: Connect the lamp to power.

2: Turn on the Bluetooth function of the mobile phone, scan the code on the receiver Box, download the APP of the mobile phone, or use the remote control to operate directly.

3: The product uses USB cable 5V/2A, can connect any USB port power supply, convenient, stable and safe

App Instructions:

1: Enter the mobile APP interface and open the upper right corner Settings to view

2: Please do not change the "Modify Pin Sequence", Otherwise will change the corresponding color. For example: choosing blue shows red.





(1) Check if the power supply is normal.(2) Check if the Bluetooth is turn on.

(3) Check if there are other mobile phone are connected, only support connections one to many, dose not support many to many.(4) Check APP Bluetooth setting if the phone is connected to the device, if connect, exit the APP and reopen, the APP will go to connect automatically. (5) Normal operations and can not connect, please exit the APP and reopen. (6) Exit APP, restart mobile phone, power on the strip light, reopen the APP, then them will connect automatically.

Guide. You'll have all the instructions here.



Group Manage + My Devices C Device disconnected



Switch to color and brightness interface:


Click to RGB manual adjustment view:



Switch to the mode interface:




Switch to the music rhythm interface:

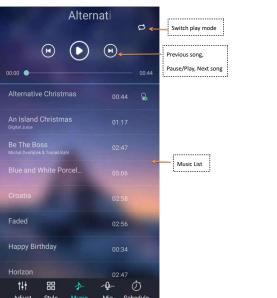


Switch to the microphone rhythm interface:



Switch to the timing interface:

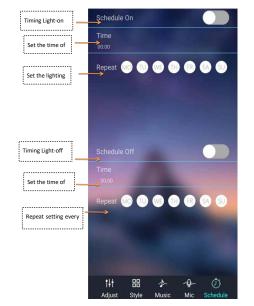

Switch to the setting interface:

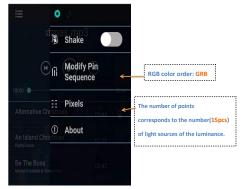

*Do not change the settings at will

if you change it, it will affect the normal use of the product:

1: The color should not match the remote control.

service, we will reply to you within 24 hours.

2: The change of the number of points will affect the dynamic effect of the light.

If you have any question after receiving the products, please contact our customer

: __ . . __ . . __ . . __ . . __ . . __ . . __ . . __ . . __ . . __ . . __ . . __ . . __ . . __ . . __ . . __ .

h) Ensure the batteries are installed correctly according to polarity (+ and -).


Common Problem:

- (1) Check if the power supply is normal.
- (2) Check if the Bluetooth is turn on.
- (3) Check if there are other mobile phone are connected, only support connections one to many, dose not support many to many.
- (4)Check APP Bluetooth setting if the phone is connected to the device, if connect, exit the APP and reopen, the APP will go to connect automatically.
- (5) Normal operations and can not connect, please exit the APP and reopen.
- (6) Exit APP, restart mobile phone, power on the strip light, reopen the APP, then them will connect automatically.

AWARNING

- INGESTION HAZARD: This product contains a button cell or coin battery.
- DEATH or serious injury can occur if ingested.
- A swallwed button cell or coin battery can cause Internal Chemical
- Burns in as little as 2 hours.
- KEEP new and used batteries OUT OF REACH of CHILDREN Seek immediate medical attention if a battery is suspected to be
- swallowed or inserted inside any part of the body.





- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) Battery type: CR2025
- e) Nominal battery voltage: 3V.
- f) Non-rechargeable batteries are not to be recharged.
- g) Do not force discharge, recharge, disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- i) Remove and immediately recycle or dispose of batteries from equipment not used for an
- extended period of time according to local regulations.





